
 
 


Table Of Contents

Button Description	2-3
Battery Installation	3
Programming Your Universal Remote	
TV	4
TV Codes	4-5
VCR.....	6
VCR Codes	6-7
Cable Box	8
Cable Box Codes.....	9
Programming With Code Search	9
Retrieval Codes	10
TV Menu.....	11
Sleep Feature	12
Trouble Shooting	13
Help Line	13

 

Button Description

INDICATOR LIGHT

The Indicator Light flashes to show that the remote is working.

POWER

The POWER button operates the same as your original remote
 Note: Some RCA, GE and ProScan models require you to press the device button to turn the device on and the POWER button to turn the device off.

CODE SEARCH

Used to program the remote or to search through codes.

TV, VCR, & CABLE

The TV, VCR, and CABLE buttons are used to select the device you want to control.

REW, PLAY, FWD, REC, STOP, & PAUSE

The REW, PLAY, FWD, REC, STOP, & PAUSE buttons operate the same as on your original VCR remote. You must press the REC button **twice** to begin recording.

TV•VCR

The TV•VCR button operates the TV•VCR function of your VCR.

ENTER

The ENTER button is used to complete channel selection for some brands of TV. It is also used to complete the code entry process.

VOL & CHAN

The VOL (Volume) and CHAN (Channel) buttons increase or decrease the channel numbers or volume.

MUTE

To MUTE the volume on the TV.

PREV CH

PREV CH allows you to go to the previous channel you selected. Operates the same as Last Channel, Go Back or Recall button on your original remote.

0-9

The number buttons operate the same as on your original remote, and are used for entering device codes or channel numbers.

MENU

The MENU button calls up the TV set up menu.

SLEEP

The SLEEP button allows you to set a time to turn off the TV automatically.

Battery Installation

Your Universal Remote requires 2 new AAA alkaline batteries.

To install the batteries:

1. On the back of the remote, push and slide the cover off.
2. Match the batteries to the + and - marks inside the battery case, then insert the batteries.
3. Press and slide the battery cover back into place.


Note: Reprogramming may be required after batteries are removed.

Programming For TV


1. Manually turn on the TV.

Find the three-digit code for your TV in the code list below.


2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.

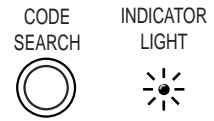

 3. Press and release the **TV** button (The **INDICATOR LIGHT** will blink then remain lit).




 4. Enter the code using the Number Buttons.



After your code is entered, the **INDICATOR LIGHT** will turn off.

 5. Aim the remote at your TV and press the **POWER** button. Your TV should turn off.





Note: If your TV does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 9.

6. With your TV on, press **CHAN+**. If the TV responds, no further programming is required.



 7. Enter your code here for easy reference.

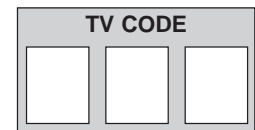

TV Code List

Abex	172	CXC	038
Admiral	001, 173	Daewoo.....	016, 190, 005
Adventura	174	171, 004, 006, 017, 127
Aiko	016	Daytron	004, 006, 171
Akai.....	002	Dimensia.....	000
Alleron.....	046	Dumont.....	004, 151
Amtron	038	Dynatech.....	004
Anam National	003, 038	Electroband.....	002
AOC	006, 005, 004, 007	Electrohome	004, 006, 002, 003
Audiovox	038	019, 022
Belcor	004	Emerson	030, 171, 191, 004
Bell & Howell	001, 083, 162	038, 046, 006, 012, 023, 024, 025	026, 027, 028, 029 031, 032, 033
Bradford	038	034, 035, 036, 037, 039, 041, 042	043, 044, 047, 123, 124, 162 177
Brokwood	004	179
Candle	004, 006, 008, 174	Envision	004, 006
Celebrity	002	Fisher	048, 049, 051, 162, 180
Citizen	016, 171, 004, 006, 008	Fujitsu.....	046
.....	038, 105, 174, 177	Funai.....	038, 046
Colortyme	004, 006	Futuretec.....	038
Concerto	004, 006	GE.....	000, 054, 003, 004, 006
Contec / Cony.....	012, 013, 038	022, 052, 055, 087, 164 165
Craig	038	166, 167, 168, 181
Crown	038, 171	Gibraltar	004, 151
Curtis Mathes	171, 000, 004		
.....	006, 015, 105, 162		

TV Code List Continued


Goldstar	005, 156, 004, 006	Runco	151
.....172, 012, 019, 056, 057, 058		Sampo	004, 006, 171, 172
.....155, 171		Samsung	171, 004, 005, 105
Grundig	171, 038, 046006, 012, 015, 017, 019, 104	
Hallmark	004, 006106, 172	
Harvard	038	Sansui	191
Hitachi.....	059, 004, 148, 006 012	Sanyo	048, 080, 004, 180, 162
.....013, 060, 061, 135, 136, 137	169, 049	
.....138, 139, 140, 141, 142, 143		Scotch	006
.....144, 145, 146, 150, 179		Scott	004, 038, 046, 006, 012
IMA	038024, 035	
Infinity	062	Sears	000, 048, 189, 004, 046
Janeil	174006, 013, 019, 049, 051, 066	
JBL	062072, 109, 110, 162, 180, 181	
JCB	002	Sharp	173, 095, 171, 004, 006
JC Penny	000, 054, 005, 171012, 029, 111, 112, 113, 122	
004, 052, 006, 172, 008 020 058		Shogun	004
.....063, 064, 072, 087, 105, 181		Signature	001, 083
Jensen	004, 006	Simpson	008
JVC.....	159, 013, 012, 182, 054	Sony	002, 218
060, 065, 066, 067, 123 157, 158		Soundesign.....	004, 038, 046, 006
Kawasho.....	002, 004, 006008	
Kenwood.....	004, 006, 019	Squareview	189
Kloss Novabeam ..	068, 069, 174	SSS.....	004, 038
.....183		Starlite	038
KTV	171, 038, 177, 070	Supre-Macy	174
Loewe	062	Supreme	002
Logik	083	Sylvania.....	062, 004, 006, 088
Luxman	004, 006076, 116, 008, 019, 068, 069	
LXI	000, 062, 006, 073, 162075, 077, 161, 183	
.....181, 049, 072		Symphonic	038, 189, 033
Magnavox.....	062, 004, 006, 130	Tandy	173
.....134, 183, 008, 019, 068, 069		Tatung	003
.....075, 076, 077, 088, 131, 132		Technics	054
.....133, 219, 235		Techwood	004, 006, 054
Majestic.....	083	Teknika	016, 005, 171, 004
Marantz.....	004, 006, 062006, 008, 012, 013, 038, 046	
Megatron.....	006, 059076, 082, 083, 105, 170	
Memorex.....	083, 006 001	Tera.....	004, 012, 093
.....082, 162		TMK	004, 006
MGA	005, 004, 006	Toshiba.....	105, 162, 160, 161
.....079, 082, 019, 022, 051, 080	049, 072, 109, 118	
Midland	054, 151, 171	Totevision	171
.....172, 181		Universal.....	052, 087
Minutz	052	Victor	066, 182
Mitsubishi.....	005, 004, 006	Vidtech	004, 005, 006
.....125, 082, 081, 019, 022, 051		Viking	174
.....079, 080, 135		Wards.....	000, 062, 095, 005
Montgomery Ward ..	083004, 046, 052, 006, 083, 001	
Motorola	003, 173019, 024, 033, 068, 069, 075	
MTC	005, 004, 105, 006076, 087, 088, 119, 120	
Multitech	038	Yamaha	004, 005, 006, 019
NAD	006, 185, 072	Zenith.....	051, 083, 004, 152
NEC	005, 004, 006, 003151, 153, 154, 217	
Nikko.....	006, 016		
NTC	016		
Onwa	038		
Optimus	185		
Optonica	095, 173		
Orion	191, 035		
Panasonic.....	170, 054, 062, 003		
Philco	062, 005, 004, 006, 183		
.....008, 012, 019, 003, 068, 069			
.....075, 077			
Philips.....	062, 004, 075, 008, 019		
.....003, 012, 068, 069, 076, 086			
.....087, 088			
Pilot.....	004, 171		
Pioneer.....	004, 006		
.....090, 091, 092, 136, 179, 185			
Portland.....	016, 005, 171		
.....004, 006			
Price Club	105		
Prism.....	054		
Proscan.....	000, 181		
Proton.....	004, 006, 012, 093		
Pulsar	151		
Pulser	004		
Quasar	003, 054, 070		
Radio Shack / Realistic	000		
.....095, 171, 004, 038, 006, 012			
.....049, 162			
RCA	000, 100, 005, 003, 004		
.....006, 007, 019, 096, 098, 099			
.....101, 102, 103, 129, 179, 181			
.....188, 190, 203, 233			

Programming For VCR


1. Manually turn on the VCR.

Find the three-digit code for your VCR in the code list below.

 
2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.



 3. Press and release the **VCR** button (The **INDICATOR LIGHT** will blink then remain lit).



4. Enter the code using the Number Buttons.

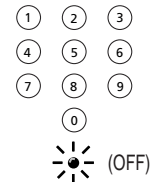


After your code is entered, the **INDICATOR LIGHT** will turn off.

5. Aim the remote at your VCR and press the **POWER** button. Your VCR should turn off.




Note: If your VCR does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 9.

 6. With your VCR on, press **CHAN+**. If the VCR responds, no further programming is required.



 7. Enter your code here for easy reference.



VCR Code List

Admiral	001	Craig.....	013, 014, 023, 061
Adventura	026	Curtis-Mathes	022, 013, 115
Aiko	027024, 000, 009, 016, 018, 021	
Aiwa	026	Cybernex	013
Akai	008, 113, 112, 003	Daewoo	027, 025, 015, 017
.....005, 007, 111	019, 026, 028, 110	
American High	021	Daytron	110
Asha	013	DBX	009, 010
Audio Dynamics	009, 010	Dimensia.....	000
Audiovox	014	Dynatech	026
Bell & Howell.....	011	Electrohome	014, 029
Beaumarck	013	Electroponic	014
Broksonic	031, 025, 012	Emerson	014, 025, 026, 065
Calix	014041, 015, 012, 021	
Candle	014, 013, 015, 018024, 029, 030, 031	
.....016, 017, 019	032, 033, 034, 036	
Canon	021, 022037, 038, 039, 040	
Capehart	020, 110042, 044, 045, 046	
Carver	062047, 105, 113, 116	
CCE	027, 061117, 130	
Citizen	014, 013, 027, 015	Fisher	011, 023, 052, 048
.....016, 017, 018, 019	049, 050, 051, 118	
Colortyme	009	Fuji	021, 119
Colt	061	Funai.....	026

VCR Code List Continued


Garrard	026	Radix	014
GE	000, 022, 013, 115	Randex	014
.....	053, 021, 120	Ricoh	128
Goldstar	014, 018, 054, 009	Runco	104
Grandiente	026	Samsung	013, 015, 112, 053
Harley Davidson	026	055, 033
Harman Kardon	009	Sanky	001, 104
Harwood	061	Sansui	010, 092, 111, 123
Headquarter	011	Sanyo	011, 013, 023
Hitachi	055, 120, 056, 057	Scott	025, 065, 015, 012
.....	107, 111	032, 038, 116
HI-Q	023	Sears	014, 055, 011, 023
Instant Replay.....	021	118, 021, 028, 048
JCL	021	049, 050, 051, 056, 107
JC Penny	014, 011, 022, 013	Sharp.....	001, 095, 017, 029
.....	009, 118, 060, 107	094, 096, 097
.....	010, 021	Shintom	056, 061, 098
Jensen	055, 056, 111	Shogun	013
JVC	009, 010, 011, 018	Signature	001
.....	111, 123	Singer	021, 061, 128
Kenwood.....	009, 010, 123, 111	Sony	099, 119, 098
.....	011, 016, 018	STS.....	021, 107
KLH.....	061	Sylvania	022, 062, 026, 065
Kodak	014, 021	021, 063, 065, 124
Lloyd.....	026	Symphonic	026
Logik	061	Tandy	011
LXI	014	Tashiko	014
Magnavox.....	022, 062, 104, 063	Tatung	111
.....	021, 108, 124	Teac	026, 085, 111
Magnin	013	Technics	021, 109
Marantz.....	062, 011, 010, 016	Teknika	026, 022, 014, 129
.....	009, 018, 021, 022, 064	021, 100
Marta	014	TMK	013, 024, 047
Masushita	021	Toshiba	015, 055, 049, 051
MEI	021	065, 116
Memorex	026, 014, 104, 001	Totevision	013, 014
.....	011, 013, 021, 022, 023	Unitech	013
MGA	029, 065, 113	Vector Research.....	009, 010
MGN Tech.	013	015, 016
Midland	053	Victor.....	010
Minolta	055, 056, 107	Video Concepts	009, 010
Mitsubishi	065, 055, 072, 029	015, 016, 113
.....	056, 066, 067, 068	Videosonic	013
.....	069, 070, 071, 073	Wards	026, 022, 013, 055
.....	074, 106, 113, 123	001, 061, 014, 015
Montgomery Ward	001, 075	021, 023, 029, 056
Motorola	001, 021	096, 101, 102, 103
MTC	013, 026	107, 116
Multitech	013, 016, 026	XR-1000	021, 026, 061
.....	053, 061	Yamaha.....	009, 010, 011
NEC	064, 076, 011, 010	018, 111
.....	079, 009, 018, 078	Zenith	104, 119, 098, 128
.....	111, 123		
Nikko.....	014		
Noblex	013		
Olympus	021		
Orion.....	031		
Optimus	001, 014		
Optonica	096		
Panasonic.....	109, 021, 022, 125		
.....	126, 127		
Pentax	016, 055, 056		
.....	107, 120		
Pentax Research	018		
Philco	022, 062, 063, 021		
Philips.....	062, 096, 022		
.....	021, 124		
Pilot.....	014		
Pioneer.....	055, 010, 080		
.....	081, 123		
Portland	016, 017, 019, 110		
ProScan	000		
Protec	061		
Pulsar	104		
Quarter	011		
Quartz	011		
Quasar	021, 022, 125		
RCA	089, 000, 055, 022		
.....	091, 003, 013, 021		
.....	056, 082, 083, 084		
.....	085, 086, 087, 088		
.....	090, 107, 115, 120, 125		
Radio Shack / Realistic	022		
.....	014, 001, 011, 013		
.....	023, 021, 026, 029		
.....	049, 050, 096		

Programming For Cable Box


1. Manually turn on the Cable Box.

Find the three-digit code for your Cable Box in the code list below.

 
2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.



 3. Press and release the **CABLE** button (The **INDICATOR LIGHT** will blink then remain lit).



4. Enter the code using the Number Buttons.

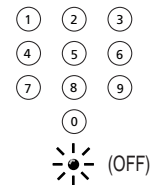


After your code is entered, the **INDICATOR LIGHT** will turn off.

5. Aim the remote at your Cable Box and press the **POWER** button. Your Cable Box should turn off.




Note: If your Cable Box does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 9.

 6. With your Cable Box on, press **CHAN +**. If the Cable Box responds, no further programming is required.



7. Enter your code here for easy reference.

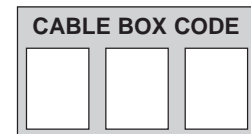


Cable Box Code List

ABC001, 003, 004	Philips011, 012, 013, 019
.....005, 006, 007025, 030, 031, 032
Antronix008, 009	Pioneer034, 033
Archer008, 009, 010, 011	RCA000, 047, 049
Cabletenna008	Realistic009
Cableview008	Regal022, 035
Century011	Regency017
Citizen011	Rembrandt003
Colour Voice012, 013	Samsung034
Comtronics015	Scientific Atlanta006, 036
Contec016037, 038
Eastern017	Signal018
Garrard011	Signature003
GC Electronics009	Sprucer000
Gemini018, 019	Standard Component039
General Instru049, 001, 003	Starcom001, 007, 018
Hamlin035	Stargate018
Hitachi003	Starquest018
Jasco011	Tocom004, 023
Jerrold049, 001, 003, 005	Tusa018
.....007, 018, 023, 024, 046	TV86027
Magnavox025	Unika008, 009, 011
Movie Time027, 028	United Cable001
NSC027, 028	Universal008, 009, 010, 011
OAK029, 016	View Star015, 016, 025, 027
Panasonic000, 048	Zenith050, 051


Retrieving Codes

If you need to find the three-digit code for your TV, VCR or Cable Box after your device is set-up using Code Search, use this procedure.

 1. Press and hold **CODE SEARCH** until the **INDICATOR LIGHT** lights, then release **CODE SEARCH**.



2. Press and release the device button for the device's code you are retrieving (**TV, VCR** or **CABLE**). The **INDICATOR LIGHT** will blink once then remain lit.

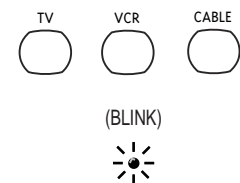

Note: For AUX, press **AUX** then the device button for the code you are retrieving.

 
3. Press and release **CODE SEARCH**. The **INDICATOR LIGHT** will turn off.



4. Starting with **0** on the keypad, press the number buttons in order (**0-9**) until the **INDICATOR LIGHT** blinks.



5. The number which causes the **INDICATOR LIGHT** to blink is the first digit of your code.




6. Repeat step 4 until you have retrieved all three numbers in the code.

Programming With Code Search


If your TV, VCR, or Cable Box does not respond after you have tried all the codes for your brand, or if your brand is not listed, try searching for your code by following the steps below.

1. Turn on the device you wish to program.

 2. Press and hold **CODE SEARCH** until the **INDICATOR LIGHT** lights, then release **CODE SEARCH**.



3. Press and release the device button for the device you are programming (**TV, VCR** or **CABLE**). The **INDICATOR LIGHT** will blink once then remain lit.

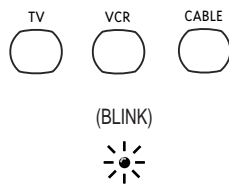

4. Press and release **POWER** until your device turns off.



Important: You may have to press **POWER** up to 200 times.

5. When your device turns off, press the **ENTER** button, the **INDICATOR LIGHT** will go off.




Television Menu Function

The TV Menu is used to make changes in the TV settings such as setting color, channels, timers, etc.

Entering the TV Menu Mode:

1. Push the **TV** button on the remote.
2. Push the **MENU** button.


This puts the remote in TV Menu Mode. The TV Menu should now be visible on the television. The **INDICATOR LIGHT** will blink continuously to indicate the remote is now in TV Menu Mode.

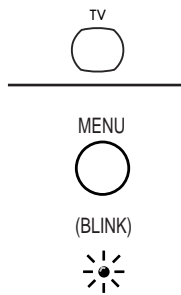

While in **TV MENU** these buttons will function as follows:

VOL +/- buttons will operate as **CURSOR RIGHT/LEFT**.

CHAN UP/DOWN keys will operate as **CURSOR UP/DOWN**.

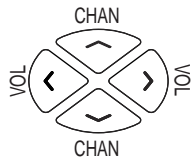

For RCA, GE, & ProScan TVs pushing the **MENU** button will select the highlighted item. The numeric buttons may also be used to select the MENU choice.



Note: Not all functions in competitive models and brands of televisions may be fully supported.

Exiting the TV Menu Mode:

To exit the Menu Mode and clear the **TV** screen push the **TV** button on the remote. The **INDICATOR LIGHT** should go out indicating the remote is now out of TV Menu Mode and will revert to it's normal mode of operation.



Note: The remote will automatically exit the TV Menu Mode after 10 seconds of inactivity with no buttons being pushed.

Special notes:


1. Because of the wide variety of menu formats, some experimenting may be required.
2. SONY: Pressing the **ENTER** button while in menu mode returns to previous menu.
3. ZENITH: Push the menu button a second time to move from the **SET-UP MENU** to the **VIDEO MENU**.

Sleep Feature

This feature will turn off your TV at the time you choose from 1 to 99 minutes.

To Program Sleep Feature:


1. Press and hold the **SLEEP** button. **INDICATOR LIGHT** will stay lit. Release the **SLEEP** button.
2. Enter time in minutes using the numerical key pad. Indicator light should go off. (Minutes 1 thru 9: press **0** before the actual number Maximum: 99 minutes)
3. Leave remote aimed at television. (Sleep Feature will not work unless remote is left aimed at television.)

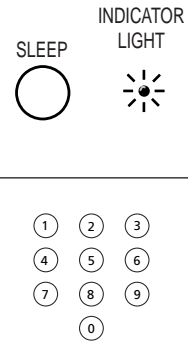

To Turn Off The Sleep Timer:

Sleep timer program will be cancelled and reset to zero by either of the following:

1. Press and hold **SLEEP** button until **INDICATOR LIGHT** blinks or press **ON•OFF** button, turning TV OFF.

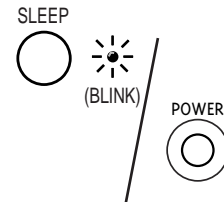

Trouble Shooting

Problem	Solution
Indicator light not blinking when you press any button	A) Replace the batteries with 2 new AAA Alkaline batteries. B) Check that batteries are properly installed.
The Remote does not operate your device	A) Try all the codes listed for your brand. B) Try the Code Search method on page 9.
Not performing commands properly	Start Code Search over again to locate the proper code.
Problems programming a TV/VCR Combo Unit	Try the VCR code for your brand. Some combo units, however, may require both a TV and a VCR code for full operation.
VCR not recording	As a safety feature on your remote, you must press the REC button twice.
Channel up and down do not function on an RCA TV	Due to some designs, the original remote will only perform these functions.
Problems changing channels	If your original remote required ENTER after a channel, press ENTER after you select a channel.
No response after pressing a button	A) Make sure you have new batteries, and you are aiming your remote at your devices. B) Check that batteries are properly installed see page 3.
Sleep feature does not work	Remote must remain aimed at television after sleep is set in order for it to work.

Note: Reprogramming may be required after batteries are removed.

Help Line

If you need additional set-up help please call the Helpline at:
1-800-420-7229

RCA Accessories

The following RCA accessories are available through your RCA dealer or by calling 1-800-338-0376.

RC926 Wireless Phone Jack


Turn Just About Any Electrical Outlet Into A Phone Jack Instantly*

Exclusive technology sends phone signal through the electrical wiring in your home.

No Wiring, No Drilling, No Tools!
Installs In Two Simple Steps


STEP 1

Plug Base Unit into electrical outlet near an existing phone jack, and connect phone jack to Base Unit with included phone cord.

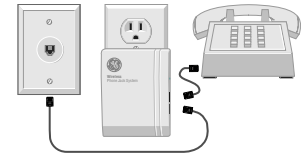

STEP 2

Plug Extension Unit into any other electrical outlet and connect phone to Extension Unit.

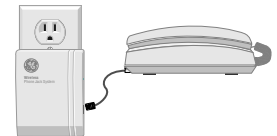

Works With:

Corded Phones
Cordless Phones
Answering Machines
Fax Machines
Computer Modems

Compatible With:

Call Waiting
Call Forwarding
Three-Way Calling
Speed Dialing

RC926
\$59⁹⁵
Plus Shipping/Handling
& Sales Tax

ANT200 Amplified TV Antenna

To receive UHF or VHF stations or serve as a backup for cable outages, purchase the RCA Amplified TV Antenna. Switching between your cable or satellite and your antenna is made easy with an integrated A/B switch. Hooks up to any TV and includes all necessary accessories.

Features include:

- Dipoles tilt and rotate for improved picture
- UHF Loop turn range of 345°
- Gold plated connectors for improved signal conductivity
- Manual Gain Control to Boost Signal
- Five-Year Limited Warranty
- Measures 8¼ H. X 8½ W. X 4¼ D.

ANT200
\$44⁹⁵
Plus Shipping/Handling
& Sales Tax



ANT200

How To Order

To order, see your local RCA retailer. Or:

ORDER BY PHONE:

Have your Visa, MasterCard or Discover Card ready and call the toll-free number listed below. This number should only be used to place orders for the above-listed Accessories.

1-800-338-0376

ORDER BY MAIL:

Complete this order form and mail to:
RCA Accessories
PO Box 8419
Ronks, PA 17573

Include this completed form with your order.

Description	Model #	Price	Qty.	Total
Wireless Phone Jack	RC926	\$59.95		
Amplified TV Antenna	ANT200	\$44.95		
Sales Tax	We are required by law to collect the appropriate sales tax for each individual state, county, and locality to which the merchandise is being sent.			
Shipping and Handling				\$5.00
Total Amount Due				

Name: _____
 Address: _____
 City/State: _____
 Zip: _____
 Daytime Phone Number: _____

Check Enclosed Money Order Enclosed

Visa MasterCard Discover

Card Number:
 □□□□ - □□□□ - □□□□ - □□□□

Exp: _____
 Signature: _____

Shipping and handling is charged for all orders.

Please allow 4-6 weeks for mail orders.

90 Day Limited Warranty

Thomson Consumer Electronics warrants that for 90 days from date of purchase this product is free from defects in material and workmanship. If the item is defective within that period, return it at your expense to the dealer from whom it was purchased together with proof of purchase for replacement. This warranty excludes defects or damage due to misuse, abuse, or neglect. The foregoing represents Thomson's sole obligation under this warranty.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For purchases outside the United States, contact your dealer for warranty information



Help Line (US Only)

If you need additional set-up help, call our toll-free Help Line at 1-800-420-7229

©1999 Thomson Consumer Electronics, Inc.
 Trademark(s)[®] Registered
 Marca(s) Registrada(s)

First Class
Postage
Required

RCM

Thomson Consumer Electronics
2000 Clements Bridge Road
Deptford NJ. 08096-2011

Attn: Remote Control
Purchase Registration

Inside Card

RCU1300 Product Registration

Please complete and return this Purchase Registration Card right away. This information will help us get to know and service our customers better.

1. Mr. Mrs. Ms. Name: _____
Address: _____

2. Model: **RCU1300**

3. Date of Purchase/Receipt as Gift: _____ 4. Price: \$ _____

5. Age of Purchaser/Gift Recipient:

16-25 26-35 36-45 46-55 56+

6. What specific need did the Universal Remote help you resolve?

A. Replacing A Lost Remote B. Replacing A Broken Remote
 C. Consolidating Remotes D. Adding an Extra Remote

7. Where will this remote primarily be used?

and with what brand? TV: _____
VCR: _____ Cable Box: _____

A. Kitchen B. Bedroom C. Family Room/Living Room
 D. Other _____

8. How did you become aware of this remote?

A. Advertisement B. Salesperson C. Store Display
 D. Received as a Gift E. Friend or Relative _____
 F. Other _____

9. What other brands did you consider buying?

A. None
 B. RCA C. One For All D. Zenith
 E. Magnavox F. Sony G. Other _____

10. What factors most influenced this purchase? (Check up to 3)

A. Brand B. Features C. Recommendation
 D. Price E. Received as a Gift F. Other _____

What suggestions do you have to improve this product?

Thank you for filling out this card. This information will help us better serve you and others who purchase RCA Consumer Electronics Products. We will not share your information with any other companies.

Inside Card