

Cover/Front of Package



**Do Not Print On
Inside of Cover**

Thank you for purchasing this RCA Universal Remote Control. This product is designed to provide years of service operating a wide variety of video and audio components.

Please retain this guide for future reference.

Table of Contents

Installing The Batteries	3
Button Description	4-5
Programming For TV.....	6
Programming VCR.....	8
Programming For DSS/DBS.....	10
Programming For Cable Box	11
Assigning The AUX Button	12
Programming With Codes Search	14
Getting Codes From Your Remote.....	14
Trouble Shooting.....	15
Help Line	15
Warranty	Insert Card

This Universal Remote Control is already programmed for most RCA, GE and ProScan TVs, VCRs, and DSS Systems.

Please Note: For users of RCA, GE and ProScan DSS Products, older DSS Models require that the DISPLAY Button on this remote be used to make program selections. Use the SELECT button for making program selections on newer RCA, GE and ProScan DSS models.

Battery Installation

Your remote requires two (2) new AAA alkaline batteries. To install the batteries:

1. Turn the remote over and push down on the arrow and slide the cover off.
2. Insert the batteries, matching the battery to the + and - marks inside the battery case.
3. Press the battery cover back into place.

Note: Removing the batteries may require you to reprogram the unit.

Button Description

TV, VCR, SATELLITE, AUX

The TV, VCR, SATELLITE and AUX buttons are used to select the device you want to control.

CODE SEARCH

Used to program the remote or to search through codes.

INDICATOR LIGHT

The light flashes to show that the remote is working.

POWER

The POWER button operates the same as your original remote (note: some RCA, GE and ProScan models require you to press the device key to turn the device on and the power key to turn the device off).

GUIDE

Brings up the on-screen program guide. Press the GUIDE button several times to toggle through the different types of guides.

ARROWS


Use the navigation arrows to move the on-screen highlight up, down, left, or right. Using the arrows to highlight a menu item is also called pointing.

CLEAR

Removes the on screen display to return to normal viewing.

REW, PLAY, FWD, REC, STOP, PAUSE

The REW (Rewind), PLAY, FWD (Fast Forward), REC (Record), STOP, and PAUSE buttons operate the same as on your original VCR or remote. **You must press the REC button twice to begin recording.**

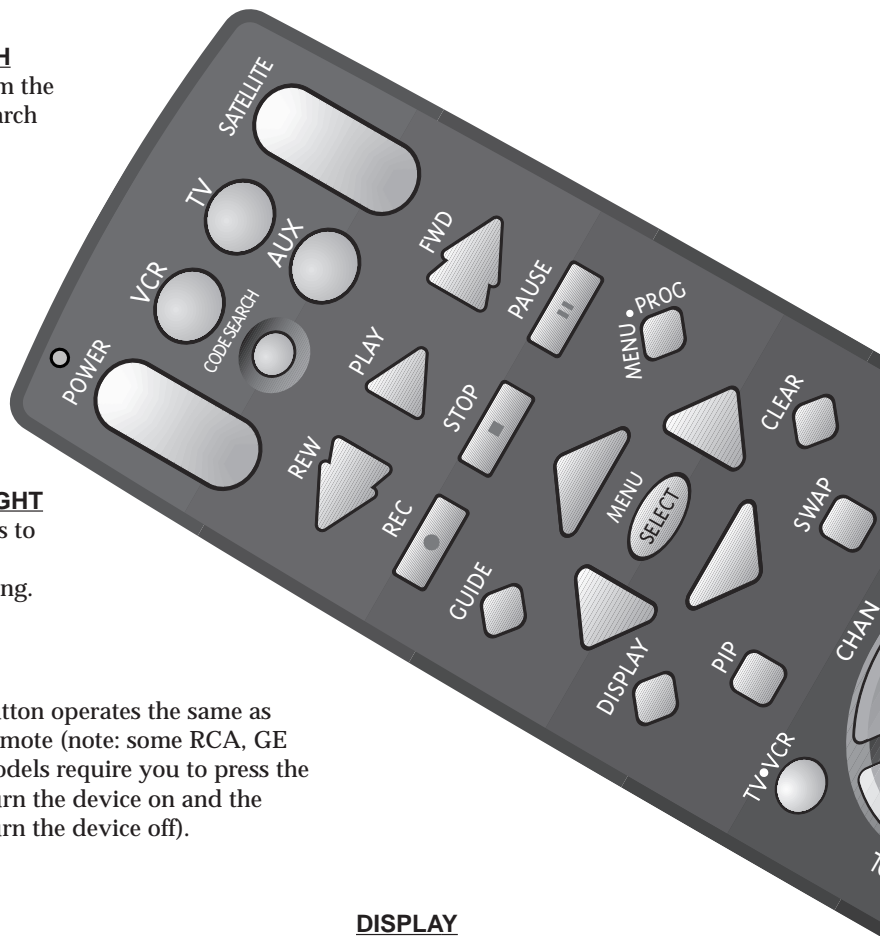

DISPLAY

Brings up the on-screen channel marker. Use to make program selections on some DSS models

MENU•SELECT

Brings up the Main Menu. If you are already in the menu system, press MENU•SELECT to select a highlighted choice. The ARROW keys move through the Program Guide.

NAVIGATION & SELECT

Used to move through on screen menuing and guides. With some DSS models the DISPLAY button should be used to select the highlighted item

Button Description

PIP and SWAP

PIP (Picture-in-Picture) and SWAP Controls operate your Television's Picture-in-Picture features.

PREV CH

The PREV CH (Previous Channel) button operates the same as on your original remote.

ENTER


The ENTER button operates the same as on your original remote.

TV•VCR

The TV•VCR button operates the TV•VCR function of your VCR.

VOL & CHAN

The VOL (Volume) and CHAN (Channel) buttons operate the same as on your original remote.

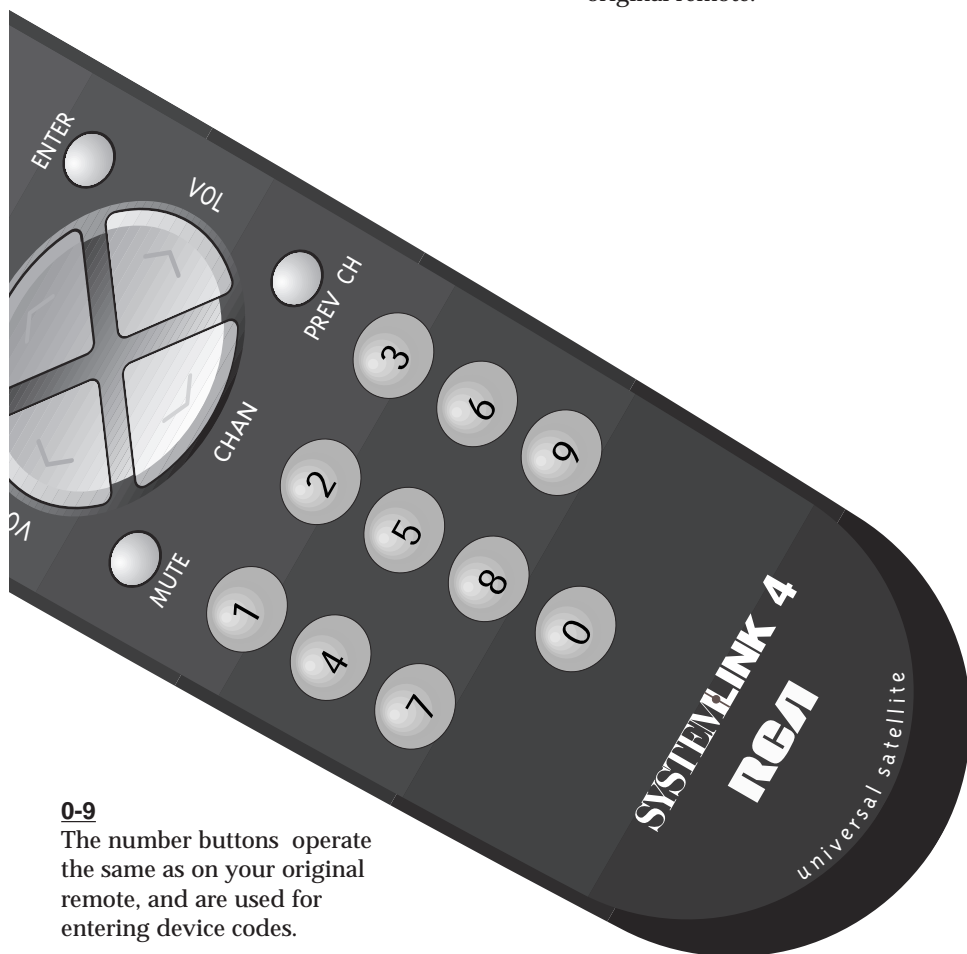

0-9

The number buttons operate the same as on your original remote, and are used for entering device codes.

MUTE


The MUTE button operates the same as on your original remote.

Programming Your Universal Remote For TV

Most RCA, GE and ProScan TVs will not require programming. Check to see if your TV responds to the remote before you begin programming.


To Program Your Remote for your TV:

1. Manually turn on the TV.
2. Press and hold the **CODE SEARCH** button until the **Indicator Light** lights, then release the **CODE SEARCH** button.
3. Press and release the **TV** button (the **Indicator Light** will blink then remain lit).
4. Find the three digit code for your TV in the code list starting below and enter it using the Number Buttons. After your code is entered, the **Indicator Light** will turn off.
5. Aim the remote at your TV and press the **POWER** button. Your TV should turn off.

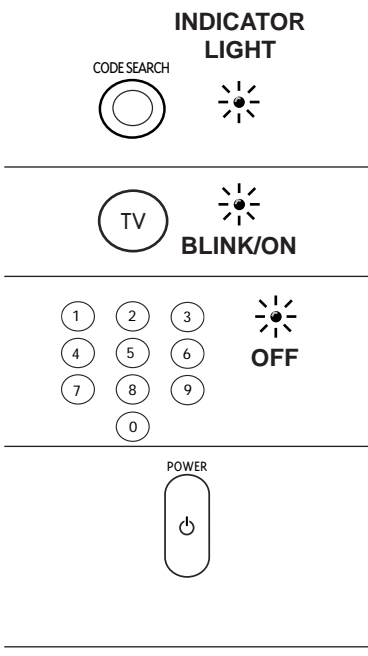

Note: If your TV does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 14.

6. With your TV on, press **CHANNEL UP**. If the TV responds, no further programming is required.
7. Enter your code here for easy reference.

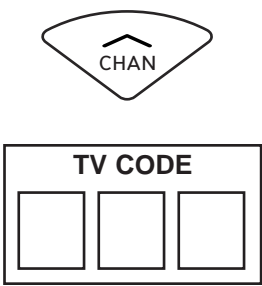

TV Code List

Abex	172	Colortyme	004, 006, 010, 200
Admiral.....	001, 173	Concerto	004, 006
Adventura	174	Contec/Cony	011, 012
Aiko.....	016		013, 014, 038, 176
Alleron	046	Craig	038
Amtron	038	Crown	038, 171
Akai.....	002, 006	Curtis Mathes	000, 004, 006, 015
Anam National	003, 038, 192		105, 162, 171
	193, 194	CXC	038
AOC	004, 005, 006, 007	Daewoo.....	004, 005, 006, 016, 017
	175, 176, 195		018, 126, 127, 171
Audiovox	038	Daytron.....	004, 006, 171
Belcor.....	004	Dimensia.....	000
Bell & Howell	001, 083, 162	Dumont.....	004, 151
Bradford	038	Dynatech.....	178
Broksonic	020	Electroband	002, 176
Brokwood	004	Electrohome	003, 004, 006
Candle.....	004, 006, 008, 174		019, 020, 021, 022
Capehart	175	Emerson	004, 006, 012, 014, 023, 024
Celebrity	002		025, 026, 027, 028, 029, 030
Centurion	009		031, 032, 033, 034, 035, 036
Citizen.....	004, 006, 008, 016, 038		037, 038, 039, 040, 041, 042
	105, 171, 174, 177		043, 044, 045, 046, 047, 123, 124
Clairtone	176		162, 163, 171, 176, 177, 179, 197

TV Code List Continued

Envision	004, 006	Pilot	004, 171
Fisher	048, 049, 050, 051, 162, 180	Pioneer	004, 006, 090, 091
Fujitsu	046		092, 136, 179, 185
Funai	038, 046, 097	Portland	004, 005, 006, 016, 171
Futuretec	038	Price club	105
GE	000, 003, 004, 006, 022, 052	Prism	054
	053, 054, 055, 087, 163, 164	ProScan	000, 181
	165, 166, 167, 168, 181	Proton	004, 006, 012, 093
Gibraltar	004, 151		149, 186, 175
Goldstar	004, 005, 006, 012, 019, 056	Pulsar	151
	057, 058, 153, 155, 156, 171, 172	Pulser	004
Grundig	038, 046, 171	Quasar	003, 054, 070, 094
Hallmark	004, 006	Radio Shack	000, 004, 006, 011, 012
Harvard	038		038, 049, 095, 162, 171, 172
Hitachi	004, 006, 011, 012, 013, 053, 059	Realistic	000, 004, 006, 011, 012
	060, 061, 135, 136, 137, 138, 139		038, 049, 095, 162, 171, 172
	140, 141, 142, 143, 144, 145, 146	RCA	000, 003, 004, 005, 006, 007, 019
	147, 148, 149, 150, 179, 198, 199		096, 097, 098, 099, 100, 101, 102
IMA	038		103, 129, 179, 181, 187, 188, 202, 203
Infinity	062	Rhapsody	176
Janeil	174	Runco	151
JBL	062	Sampo	004, 006, 171, 172, 175
JCB	002	Samsung	004, 005, 006, 011, 012
JC Penney	000, 004, 005, 006, 008, 022		015, 019, 020, 104, 105
	052, 054, 058, 063, 064, 072		106, 171, 172, 201, 204
	087, 105, 128, 171, 172, 181, 201	Samsux	171
Jensen	004, 006	Sanyo	004, 048, 049, 050, 080, 107
JVC	011, 012, 013, 054, 060, 065, 066		108, 162, 169, 180
	067, 089, 123, 157, 158, 159, 182	Scotch	006
Kawasho	002, 004, 006	Scott	004, 006, 012, 024, 035, 038, 046
Kaypani	175	Sears	000, 004, 006, 013, 019, 020, 046
Kenwood	004, 006, 019, 020		048, 049, 050, 051, 066, 071, 072
Kloss Novabeam	068, 069, 174, 183		109, 110, 162, 180, 181, 189, 197
KTV	038, 070, 171, 176, 177	Sharp	004, 006, 012, 029, 095, 111
Loewe	062		112, 113, 114, 122, 171, 173
Logik	083	Shogun	004
Luxman	004, 006	Signature	001, 083, 115
LXI	000, 006, 049, 062, 071, 072	Simpson	008
	073, 162, 181	Sonic	176
Megatron	006, 059	Sony	002, 190, 205
Magnavox	004, 006, 008, 019, 062, 068	Soundesign	004, 006, 008, 038, 046
	069, 074, 075, 076, 077, 088	Squareview	189
	089, 130, 131, 132, 133, 134, 183, 184	SSS	004, 038
Majestic	083	Starlite	038
Marantz	062	Supre-Macy	174
Marantz	004, 006, 062, 078	Supreme	002
MEI	176	Sylvania	004, 006, 008, 019, 062, 068
Memorex	001, 006, 082, 083, 162		069, 074, 075, 076, 077, 088
MGA	004, 005, 006, 019, 020, 021		116, 161, 183, 184
	022, 051, 079, 080, 082	Symphonic	033, 038, 189
Midland	054, 151, 171, 172, 181	Tandy	173
Minutz	052	Tatung	003, 178
Mitsubishi	004, 005, 006, 019, 020	Technics	054
	021, 022, 051, 079, 080	Techwood	004, 006, 054
	081, 082, 125, 135	Teknika	004, 005, 006, 008, 012
Montgomery Ward	083		013, 016, 038, 046, 076
Motorola	003, 173		082, 083, 105, 170, 171
MTC	004, 005, 006, 105, 176, 178	Telecaption	117
Multitech	038, 178	Tera	186
Multivision	084	TMK	004, 006
NAD	006, 071, 072, 185	Toshiba	049, 071, 072, 089, 105, 109
NEC	003, 004, 005, 006		117, 118, 160, 162, 201
	020, 085, 089, 200	Totevision	171
Nikko	006, 016	Universal	052, 053, 087
NTC	016	Victor	066, 182
Onwa	038	Vidtech	004, 005, 006
Optimus	185	Viking	174
Optonica	095, 173	Wards	000, 001, 004, 005, 006, 019
Orion	035		024, 033, 046, 052, 053, 062
Panasonic	003, 054, 062, 170		068, 069, 074, 075, 076, 083
Philco	003, 004, 005, 006, 008		087, 088, 095, 119, 120, 184
	012, 019, 062, 068, 069	Yamaha	004, 005, 006, 019, 020
	074, 075, 077, 183, 184	York	151
Philips	003, 004, 008, 012, 019, 046	Zenith	083, 121, 151, 152, 153, 154
	047, 062, 068, 069, 074, 075		
	076, 086, 087, 088, 089		

 
 
Programming Your Universal Remote For VCR

Most RCA, GE and ProScan VCRs will not require programming. Check to see if your VCR responds to the remote before you begin programming.

To Program Your Remote for your VCR:

1. Manually turn on the VCR.
2. Press and hold the **CODE SEARCH** button until the **Indicator Light** lights, then release the **CODE SEARCH** button.
3. Press and release the **VCR** button (the **Indicator Light** will blink then remain lit).
4. Find the three digit code for your VCR in the code list starting below and enter it using the Number Buttons.

After your code is entered the **Indicator Light** will turn off.
5. Aim the remote at your VCR and press the **POWER** button. Your VCR should turn off.

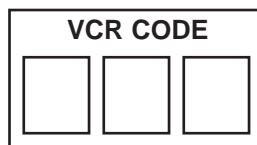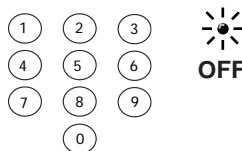

Note: If your VCR does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 14.

6. With your VCR on, press **CHANNEL UP**. If the VCR responds, no further programming is required.
7. Enter your code here for easy reference.

VCR Code List

Admiral	001	Curtis-Mathes.....	000, 002, 009, 013, 016
Adventura	026		018, 021, 022, 024, 115
Aiko	027	Cybernex	013
Aiwa	002, 026	Daewoo	015, 017, 019, 025, 026
Akai	003, 004, 005, 006, 007		027, 028, 110, 130
	008, 111, 112, 113	Daytron	110
American High	021	DBX	009, 010
Asha	013	Dimensia	000
Audio Dynamics	009, 010	Dynatech	002, 026
Audiovox	014	Electrohome	014, 029
Bell & Howell	011	Electroponic	014
Beaumark	013	Emerson.....	002, 006, 012, 014, 015
Broksonic.....	012, 025		021, 024, 025, 026, 029, 030
Calix	014		031, 032, 033, 034, 035, 036
Candle	013, 014, 015, 016		037, 038, 039, 040, 041, 042
	017, 018, 019		043, 044, 045, 046, 047, 065
Canon.....	021, 022, 114		105, 113, 116, 117
Capehart	020, 110	Fisher	011, 023, 048, 049
Carver	062		050, 051, 052, 118
CCE	027, 061	Fuji	021, 119
Citizen	013, 014, 015, 016	Funai	002, 026
	017, 018, 019, 027	Garrard	026
Colortyme	009	GE.....	000, 013, 021, 022
Colt	061		053, 115, 120
Craig.....	013, 014, 023, 061	Goldstar.....	009, 014, 018, 054, 121

VCR Code List Continued




Gradiente.....	026	Runco.....	104
Harley Davidson.....	026	Samsung.....	005, 013, 015, 033, 053, 112
Harman Kardon.....	009, 068	Sanky.....	001, 104
Harwood.....	061	Sansui.....	010, 092, 111, 123
Headquarter.....	011	Sanyo.....	011, 013, 023
Hitachi.....	002, 055, 056, 057 107, 111, 120, 122	Scott.....	012, 015, 025, 032, 038 065, 093, 116
HI-Q.....	023	Sears.....	011, 014, 021, 023, 048, 049, 050, 051, 055, 056, 107, 118
Instant Replay.....	021	Sharp.....	001, 002, 017, 029, 094, 095, 096
JCL.....	021	Shintom.....	004, 056, 061, 098, 132
JC Penney.....	009, 010, 011, 013, 014 021, 022, 055, 056, 058 059, 060, 107, 118	Shogun.....	013
Jensen.....	111	Signature.....	002
JVC.....	009, 010, 011, 018, 058, 111, 123	Singer.....	021, 061
Kenwood.....	009, 010, 011, 016 018, 058, 111, 123	Sony.....	004, 098, 099, 119, 128
KLH.....	061, 131	STS.....	021, 107
Kodak.....	014, 021	Sylvania.....	002, 021, 022, 026 062, 063, 065, 124
Lloyd.....	002, 026	Symphonic.....	002, 026
Logik.....	061	Tandy.....	002, 011
LXI.....	014	Tashiko.....	014
Magnavox.....	021, 022, 062, 063 104, 108, 124	Tatung.....	058, 111
Magnin.....	013	Teac.....	002, 026, 058, 085, 111
Marantz.....	009, 010, 011, 016, 018 021, 058, 062, 064	Technics.....	021, 109
Marta.....	014	Teknika.....	002, 014, 021, 026, 100, 129
Masushita.....	021	Toshiba.....	015, 049, 051, 055 065, 093, 116
MEI.....	021	Totevision.....	013, 014
Memorex.....	001, 002, 011, 013, 014 021, 023, 026, 104	TMK.....	013, 024, 047
MGA.....	029, 065, 113	Unitech.....	013
MGN Technology.....	013	Vector Research.....	009, 010, 015, 016
Midland.....	053	Victor.....	010
Minolta.....	055, 056, 107	Video Concepts.....	009, 010, 015, 016, 113
Mitsubishi.....	029, 055, 056, 065, 066 067, 068, 069, 070, 071 072, 073, 074, 106, 113, 123	Videosonic.....	013
Montgomery Ward.....	001, 075	Wards.....	001, 002, 013, 014, 015, 021 023, 026, 029, 055, 056, 061 096, 101, 102, 103, 107, 116
Motorola.....	001, 021	XR-1000.....	021, 026, 061
MTC.....	002, 013, 026	Yamaha.....	009, 010, 011, 018, 058, 111
Multitech.....	002, 013, 026, 053, 061	Zenith.....	004, 098, 104, 119, 128
NEC.....	009, 010, 011, 016, 018 058, 064, 076, 077, 078 079, 111, 123		
Nikko.....	014		
Noblex.....	013		
Olympus.....	021		
Optimus.....	001, 014, 134		
Optonica.....	096		
Panasonic.....	021, 022, 109, 125, 126, 127		
Pentax.....	016, 055, 056, 107, 120		
Pentax Research.....	018		
Philco.....	021, 022, 062, 063		
Philips.....	021, 062, 096, 124		
Pilot.....	014		
Pioneer.....	010, 055, 080, 081, 123		
Portland.....	016, 017, 019, 110		
ProScan.....	000		
Protec.....	061		
Pulsar.....	104		
Quarter.....	011		
Quartz.....	011		
Quasar.....	021, 022, 125		
RCA.....	000, 003, 013, 021, 055, 056, 082 083, 084, 085, 086, 087, 088, 089 090, 091, 107, 115, 120, 125		
Radio Shack.....	001, 002, 011, 013, 014, 021 022, 023, 026, 029, 049, 050, 096		
Realistic.....	001, 002, 011, 013, 014, 021 022, 023, 026, 029, 049, 050, 096		
Radix.....	014		
Randex.....	014		
Ricoh.....	128		

Programming Your Universal Remote For Satellite

Most RCA, GE and ProScan Satellite systems will not require programming. Check to see if your Satellite Receiver responds to the remote before you begin programming.

To Program Your Remote for your Satellite System:

   1. Manually turn on the Satellite Receiver.
2. Press and hold the **CODE SEARCH** button until the **Indicator Light** lights, then release the **CODE SEARCH** button.
3. Press and release the **SATELLITE** button (the **Indicator Light** will blink then remain lit).
4. Find the three digit code for your Satellite Receiver in the code list below and enter it using the Number Buttons.
After your code is entered, the **Indicator Light** will turn off.
5. Aim the remote at your Satellite Receiver and press the **POWER** button. Your Satellite Receiver should turn off.
6. With your Satellite Receiver on, press **CHANNEL UP**. If the Satellite Receiver responds, no further programming is required.
7. Enter your code here for easy reference.

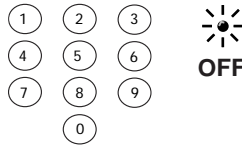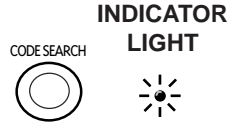

SATELLITE CODE		

Note: If your Satellite Receiver does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 14.

Satellite Codes

Chapparral.....	056, 057	Sierra I, II, III	057
Cheyenne	057	Sony.....	072
Drake.....	058, 059	STS1.....	064
Echospere (Dishnet)	078	STS2.....	065
GE	071	STS3.....	066
General Instruments.....	060, 061, 062	STS4.....	067
Hughes	077	TCE	071
Panasonic	079	Toshiba	068
Primestar	076	Toshiba	081
ProScan	071	Uniden	069
RCA.....	071	Video Cipher II	070
Realistic.....	063		

Programming Your Universal Remote For Your Cable

You can assign a Cable Box to either the Satellite or AUX buttons. Follow the steps below to assign a Cable Box to Satellite and the next page to assign it to AUX.

1. Manually turn on the Cable Box.
2. Press and hold the **CODE SEARCH** button until the **Indicator Light** lights, then release the **CODE SEARCH** button.
3. Press and release the **SATELLITE** button (the **Indicator Light** will blink then remain lit).
4. Find the three digit code for your Cable Box in the code list below and enter it using the Number Buttons.
After your code is entered, the **Indicator Light** will turn off.
5. Aim the remote at your Cable Box and press the **POWER** button. Your Cable Box should turn off.

Note: If your Cable Box does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 14.

6. With your Cable Box on, press **CHANNEL UP**. If the Cable Box responds, no further programming is required.
7. Enter your code here for easy reference.

 
INDICATOR LIGHT



SATELLITE



BLINK/ON

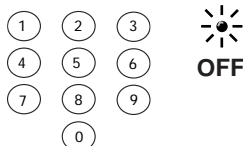

POWER



CABLE BOX




Cable Box Code List

ABC	001, 002, 003, 004, 005, 006, 007	RCA	000, 047
Antronix	008, 009	Realistic	009
Archer	008, 009, 010, 011	Regal	022, 035
Cabletenna	008	Regency	017
Cableview	008	Rembrandt	003
Century	011	Runco	026
Citizen	011	Samsung	014, 034
Colour Voice	012, 013	Scientific Atlanta	006, 036, 037, 038
Comtronics	014, 015		052, 053, 054
Contec	016	Signal	014, 018
Eastern	017	Signature	003
Garrard	011	SL Marx	014
GC Electronics	009	Sprucer	000
Gemini	018, 019	Standard Components	039
General Instrument	003	Starcom	001, 007, 018
Hamlin	020, 021, 022, 035	Stargate	014, 018
Hitachi	003	Starquest	018
Hytex	002	Starsight	046, 080
Jasco	011	Tandy	040
Jerrold	001, 003, 005, 007, 018	Televue	014
	023, 024, 049, 050	Texscan	039
Magnavox	025	Tocom	004, 023, 041
Memorex	026	Toshiba	026
Movie Time	002, 027	TUSA	018
NSC	002, 027	TV86	027
OAK	002, 016, 029	Unika	008, 009, 011
Panasonic	000, 048	United Artists	002
Paragon	026	United Cable	001
Philips	011, 012, 013, 019, 025	Universal	008, 009, 010, 011, 042
	030, 031, 032	Videoway	044
Pioneer	033, 034	Viewstar	015, 025, 027, 040
Pulsar	026	Zenith	026, 045

Assigning The AUX Button

You can assign any one of the following devices to the AUX button:
 Audio Components (CD Player, Amplifier, Receiver, Tape Deck, Phonograph), Laser Disc Player or
 a second TV, VCR, Satellite or Cable Box.

 1. Manually turn on the device you wish to control.
2. Press and hold the **CODE SEARCH** button until the **Indicator Light** lights, then release the **CODE SEARCH** button.

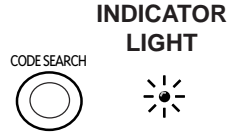


3. Press and release the **AUX** button (the **Indicator Light** will blink then remain lit). Then press the button for the device you want to program (TV, VCR, SAT) (Press SAT for a Cable Box).




4. Find the three digit code for your device in the brand list and enter it using the Number Buttons.

TV Codes	page	6-7
VCR Codes	page	8-9
Satellite Codes	page	10
Cable Box Codes	Page	11
Audio Codes	Page	13

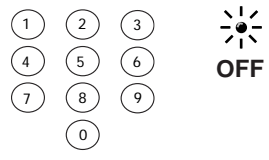

After your code is entered, the **Indicator Light** will turn off.

 5. Aim the remote at the device you wish to control and press the **POWER** button. The device should turn off.




Note: If your device does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 14.

6. With your device on, press **CHANNEL UP**. If it responds, no further programming is required.



7. Enter your code and the type of device you programmed here for easy reference.

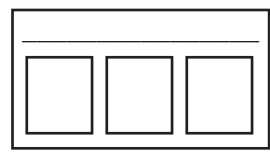

Audio Component Code List

CD PLAYERS

ADC	084
Adcom	085
Aiwa	002,086, 087, 088
Akai	089
Audio Alchemy	133
California Audio Labs	090
Carver	088, 099
Casio	091
Curtis Mathes	091
Denon	005, 092
Dkk	093
Dynamic Bass	007
Emerson	011, 094, 095
Fisher	013, 096, 097, 098, 099
GE	100
Genexxa	101, 102
Goldstar	103
Hitachi	014, 101, 102
Inkel	104
JVC	019, 105
Kenwood	013, 025, 026, 106, 107, 108
Krell	088
Lotte	031
Luxman	109
LXI	095
Magnavox	088
Marantz	036, 110, 111
MCS	112
MGA	113
Mission	088
Mitsubishi	113, 114
NAD	115
Nakamichi	116, 117
NEC	112
NSM	088
Onkyo	041, 118, 119, 120
Optimus	065, 093, 099, 101 102, 107, 121, 122, 123
Panasonic	047, 048, 090
Philips	088
Pioneer	053, 101, 102, 122, 124
Proton	088
Quasar	090
RCA	058, 059, 060, 095, 099, 125
Realistic	065, 011, 094, 099, 111
Rotel	088
SAE	088
Sansui	066, 095, 126
Sanyo	099, 121, 134
Scott	011, 094, 095
Sears	091, 095
Sharp	107
Sherwood	104, 111, 123, 127
Shure	112
Sony	073, 093, 128
STS	084
Sylvania	088
Symphonic	129
Teac	078, 111, 129, 130, 131
Technics	080, 090
Toshiba	115
Victor	105
Yamaha	082, 083, 132

AMPLIFIERS

Akai	003, 004
Fisher	012
Kenwood	023, 024
Kyocera	030
Marantz	034, 035
Mitsubishi	037, 038
Nakamichi	039
Panasonic	045
Pioneer	051
RCA	056
Sherwood	069, 070
Sony	071
Teac	077
Yamaha	082, 083

RECEIVERS

Dynamic Bass	006
Fisher	134
JVC	017, 018
Kenwood	024
Marantz	035
MCS	135
Mitsubishi	038
NAD	136
Onkyo	040
Panasonic	046
Pioneer	052
RCA	057, 135
Sansui	135
Sanyo	134
Sony	072
Technics	079
Yamaha	137

TAPE DECKS

Dynamic Bass	008, 009
JVC	020, 021
Kenwood	027, 028
Onkyo	042, 043
Panasonic	049
Pioneer	054, 055
RCA	061
Scott	067, 068
Sony	074

PHONO

Dynamic Bass	010
Kenwood	029
Onkyo	044
RCA	062
Sony	076

LASER DISCS PLAYERS

ProScan	133
RCA	133

Programming With Code Search

If your TV, VCR, Satellite Receiver, Cable Box or Audio System does not respond after you have tried all the codes for your brand, or if your brand is not listed, try searching for your code by following the steps below.


1. Manually turn on the device you wish to program.
2. Press and hold **CODE SEARCH** until the **Indicator Light** lights, then release **CODE SEARCH**.
3. Press and release the device button for the device you are programming (**TV**, **VCR**, **SATELLITE** or **AUX**). The **Indicator Light** will blink once, then remain lit.

Note: For **AUX** (when not an audio code) press **AUX** followed by the device button. Use **SAT** for **CABLE**.

4. Press and release **POWER** until your device turns off.

Important: You may have to press Power up to 200 times.

5. When your device turns off, press the **ENTER** button, the **Indicator Light** will turn off.

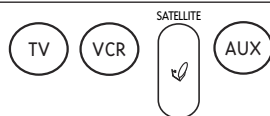

Getting Codes From Your Universal Remote

If you need to find the three-digit code for your TV, VCR, Satellite, Cable Box or Audio Component after your device is set-up using Code Search, use this procedure.

1. Press and hold **CODE SEARCH** until the **Indicator Light** lights, then release **CODE SEARCH**.

2. Press and release the device button for the device's code you are retrieving (**TV**, **VCR**, **SATELLITE**). The **Indicator Light** will blink once.


Note: For **AUX** (when not an audio code) press **AUX** followed by the device button. Use **SAT** for **CABLE**.

3. Press and release **CODE SEARCH**. The **Indicator Light** will turn off.

4. Starting with **0** on the keypad, press the number buttons in order (**0-9**) until the **Indicator Light** blinks.

5. The number which causes the indicator light to blink is the first digit of your code.

6. Repeat step 4 until you have retrieved all three

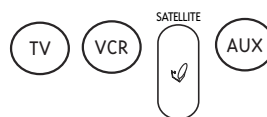


Trouble Shooting

PROBLEM	SOLUTION
Red light not blinking when you press any key	A) Replace the batteries (with fresh, new AAA Alkaline batteries). B) Check that batteries are properly installed.
The remote does not operate your video devices	A) Try all the codes listed for your brand. B) Try the Code Search method (page 14).
Not performing commands properly	Start Code Search over again to locate the proper code for full compatibility.
Problems programming a TV/VCR Combo Unit	Try the VCR code for your brand. Some combo units, however, may require both a TV and a VCR code for full operation.
VCR not recording	As a safety feature on your remote, you must press the REC button twice.
Channel up and down do not function on an RCA TV	Due to some designs, only the original remote will perform these functions.
Problems changing channels	If your original remote required ENTER after a channel, press ENTER after you select a channel.
No response after pressing a key	A) Make sure you have new batteries and you are aiming your remote at your devices. B) Check that batteries are properly installed. See page 3.
SELECT button not responding	Try using the DISPLAY Button to make the selection while in the Program Guide


Reprogramming may be required after batteries are removed.


Help Line

 If you need additional set-up help, please call the Satellite Remote Helpline at:
1-800-420-7569

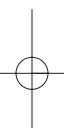



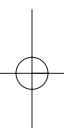



Back Cover/Back of Package



 
Warranty

Thomson Consumer Electronics, Inc. warrants that for 90 days from the date of purchase this product is free from defects in material and workmanship. If the item is defective within that period, return it at your expense to the dealer from whom it was purchased together with proof of purchase for replacement. The exchange unit is under warranty for the remainder of the original product's warranty period. This warranty excludes defects or damage due to misuse, abuse, neglect or acts of God, including but not limited to lightning damage. The foregoing represents Thomson's sole obligation under this warranty.

This warranty gives you specific legal rights, and you may have other rights which vary from state to state. For purchases outside the United States, contact your dealer for warranty information.

© 1997 Thomson Consumer Electronics, Inc.
Trademark(s)[®] Registered
Marca(s) Registrada(s)

Inside Card



Inside Card



First Class
Postage
Required



Thomson Consumer Electronics
2000 Clements Bridge Road
Deptford NJ. 08096-2011

Attn: Remote Control
Purchase Registration

Inside Card

RCUSAT1 Product Registration Card

Please complete and return this Purchase Registration Card right away. This information will help us get to know and service our customers better.

1. Mr. Mrs. Ms. Name: _____
Address: _____

2. Model: **RCUSAT1**

3. Date of Purchase/Receipt as Gift: _____ 4. Price: \$ _____

5. Age of Purchaser/Gift Recipient:

16-25 26-35 36-45 46-55 56+

6. What specific need did the Universal Remote help you resolve?

A. Replacing A Lost Remote B. Replacing A Broken Remote
 C. Consolidating Remotes D. Adding an Extra Remote

7. Where will this remote primarily be used?

and with what brand? TV: _____

VCR: _____ Cable Box: _____

Satellite Receiver: _____

A. Kitchen B. Bedroom _____
 C. Family Room/Living Room D. Other _____

8. How did you become aware of this remote?

A. Advertisement B. Salesperson C. Store Display
 D. Received as a Gift E. Friend or Relative _____
 F. Other _____

9. What other brands did you consider buying? _____

A. None C. One For All D. Zenith
 B. GE F. Sony G. Other _____
 E. Gemini

10. What factors most influenced this purchase? (Check up to 3)

A. Brand B. Features C. Recommendation
 D. Price E. Received as a Gift F. Other _____

What suggestions do you have to improve this product?

Thank you for filling out this card. This information will help us better serve you and others who purchase RCA Consumer Electronics Products. We will not share your information with any other companies.

Inside Card